

EIKON

EKBMG01

MICROPHONE TABLETOP STAND

USER'S MANUAL



ITALIANO
ENGLISH

Grazie per aver scelto un prodotto Eikon e della fiducia riposta nel nostro marchio, sinonimo di professionalità, accuratezza, elevata qualità ed affidabilità. Tutti i nostri prodotti sono conformi alle normative CE per utilizzazione continua in impianti di diffusione sonora.

Descrizione

Base microfonica in materiale plastico con interruttore ON/OFF e schermo led per la visualizzazione dello stato. Il rinforzo metallico interno, ne garantisce la massima stabilità nell'utilizzo.

- Connettore per microfono tipo XLR-3
- Connettore d'uscita tipo XLR-3
- Adatta all'impiego con microfoni gooseneck electred

Nota: per un corretto funzionamento necessita di essere alimentato da due batterie alcaline 1,5 volt tipo AA, oppure da alimentazione Phantom

Prodotto conforme alla normativa CE

Precauzioni



Per evitare il rischio di shock elettrico non aprire il prodotto.
Per prevenire rischi di incendio o di scosse elettriche non esporre questo apparecchio a pioggia e umidità



- Prima di procedere con l'installazione, leggere attentamente le istruzioni contenute nel presente manuale e conservarlo per una consultazione successiva.
- Attenzione: l'installazione errata potrebbe danneggiare irrimediabilmente l'apparecchiatura.
- L'uso del dispositivo al di fuori delle specifiche tecniche potrebbe causare una diminuzione delle prestazioni.
- In presenza di bambini, controllare che il prodotto non rappresenti un pericolo.
- Posizionare il prodotto al riparo dagli agenti atmosferici e a distanza di sicurezza dall'acqua e da luoghi ad alto grado di umidità.
- Non avvicinare il prodotto a fonti di calore (radiatori, fari, etc.).
- Evitare che qualsiasi sostanza liquida penetri all'interno del prodotto.
- Evitare di riparare il dispositivo. Per qualsiasi tipo di intervento, rivolgersi al personale qualificato.

Installazione

1. Facendo attenzione al verso, inserire il connettore del gooseneck sul connettore XLR presente sulla base microfonica fino a quando non si sente un click. Fare riferimento alla seguente illustrazione.




2. Collegare la base microfonica al mixer o all'amplificatore mediante un cavo (XLR maschio / XLR femmina).
3. Sul retro della base posizionare l'interruttore in posizione ON.
4. Sulla base lo schermo si illumina e compare la scritta MIC:OFF
5. Alla pressione del tasto ON/OFF il led passa in posizione ON ed è possibile parlare, ad una successiva pressione il led mostra la scritta MIC: OFF E la base viene disattivata.
6. Per togliere il microfono gooseneck, tenendo saldamente la base microfonica abbassare la linguetta ed estrarre il connettore del microfono.



Connessioni:

Connessione di tipo bilanciata:

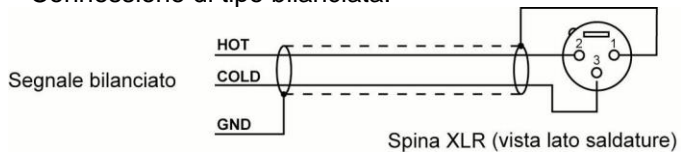

Thank you for choosing one of Eikon products, and for your confidence towards our brand, synonymous of professionalism, accuracy, high quality and reliability. All our products are CE approved and designed for continuous use in professional installation systems.

Description

Microphone stand in plastic material with ON/OFF switch and status indicator screen led. The internal metallic reinforcement ensures the maximum stability when used.

- XLR-3 microphone connector
- XLR-3 output microphone connector
- Suitable for electret microphone with gooseneck

Nota: a phantom power supply or two 1,5 volt AA alkaline batteries is necessary for a correct operating mode

Apparatus in compliance with CE standards

Precautions



To reduce the risk of electric shock do not remove cover (or back panel). No user serviceable parts inside. Refer servicing to qualified personnel only.
To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.



- Before the unit use and installation, read carefully all safety and operating instructions contained in the present user manual. Such manual should be retained for future reference.
- Attention: incorrect installation could damage irrevocably the unit.
- Any use not complying with technical specifications could reduce the unit performance.
- In case of use in presence of children, ensure that the unit does not implicate perils.
- Ensure to set the unit far away from atmospherical agent, wet ambient or ambient with high humidity levels.
- Do not keep the unit close to heat sources.
- Be careful that no liquid is spilled inside the unit.
- For service purposes, ensure to apply to qualified persons.

Installation

1. Insert the gooseneck connector in the stand XLR connector. Ensure when introducing the gooseneck to hear a “click” and to make reference to the following illustration.




2. Connect the call station microphone to the amplifier throughout the following cable (XLR male/XLR female).
3. Set ON position for Mixer/Amplifier phantom alimentation.
4. Pressing the microphone stand key, the screen led show ON and it is possible to make announcements. The following key pressing disable the microphone stand and the screen led show OFF.
5. To disconnect the gooseneck microphone, keep strongly the stand, low the tang (illustrated in below figure) and extract the microphone.



Connections:

Balanced connection:

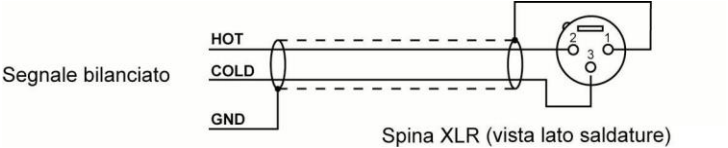

EIKON

Is a brand of

PROEL S.p.A.

(World Headquarters - Factory)

Via alla Ruenia 37/43

64027 Sant'Omero (Te) – Italy

Tel: +39 0861 81241

Fax: +39 0861 887862

www.eikon-audio.com

EIKON